



10x25 Binoculars

Nothing else measures up!



Prospect House
George Cayley Drive
Clifton Moor
York
England
YO30 4XE

Tel: +44 (0) 1904 692723
Fax: +44 (0) 1904 690385


E-Mail: sales@yorksurvey.co.uk



Code: 36494

Operating Instructions

10x25 Binoculars

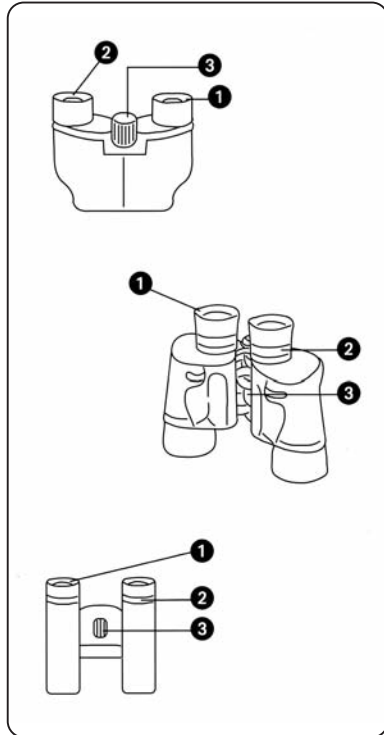

- ① Foldable rubber eyecups
- ② Dioptre setting
- ③ Centre wheel focus

How to adjust the distance between your eyes:

The distance between the eyes is called “interpupillary distance”. It varies from person to person. To achieve perfect alignment of lens to eye, follow these simple steps.

1. Hold your binoculars in the normal viewing position.
2. Grasp each barrel firmly. Move the barrels closer together or further apart until you see a single circular field. Always re-set your binoculars to this position before using. Most binoculars have a graduated area at the top of the centre hinge for reference in subsequent use in setting interpupillary distance.

Dioptre setting and central focusing:

1. Adjust the dioptre scale on the right eyepiece to “0”. Look through the binocular to an object about 50 metres away.
2. Shut your right eye and, with the centre focussing wheel (3) focus correctly for your left eye.
3. Now shut your left eye and adjust the focus for your right eye, using the dioptre ring (2)
4. Now the binocular is correctly adjusted. You can vary the focus using the centre focussing wheel and both eyes will remain in focus. Make note of the dioptre adjustment on the right side, for future use.

Fold down eyecups:

If you were sun/eyeglasses, fold down the eyecups (1)
This will bring your eyes closer to the lens thus providing an improved field of view

Cleaning:

1. Blow away any dust or debris on the lens (or use a soft lens brush).
2. To remove dirt or fingerprints, clean with a soft cotton cloth rubbing in a circular motion. Use of a coarse cloth or unnecessary rubbing may scratch the lens surface and eventually cause permanent damage to the binocular.
3. To thoroughly clean your binocular you may use a photographic type lens cleaning fluid. Always apply the fluid to the cleaning cloth, never directly onto the lens.

Warranty:

The period of warranty is two years, beginning on the day of purchase. Please also enclose the cash receipt (or a copy).

Name: _____
Post Code/City: _____
Street: _____
Telephone: _____
Signature: _____
Purchase Date: _____
Model: _____
Item No.: _____

Please keep this guarantee along with your receipt.